ICONIC

TRANCE

ELECTRIC FIRES OF DISTINCTION

# By
# Heat Design

Models

400T SLIM / 450T / 500-MK2 / 1250T / 1600T / 2000T

Please read the instructions carefully before installation and keep for future reference.

**Please Note:**

This product is for a well-insulated dwelling.

# Table of Contents


1 Important Electrical safety

2 Technical Specifications / Appliance Dimensions

3 Components

4 Operating Instructions

5 Maintenance

6 Warranty

# 1

# Important Electrical safety

Read all instructions fully before using this electric fire.

This electric fire is for **INDOOR USE ONLY**.

If installing the appliance into an existing Chimney the chimney **MUST** be blocked off / capped.

Do not locate the fire below or in front of a fixed socket outlet.

Warning **DO NOT COVER** the fan heater air inlet / outlet as it could cause possible fire. Note the warning symbol on the fire.

Do not use the fire near a bath / shower / swimming pool.

Do not use the fire in areas where gasoline / paints / flammable liquids are stored, as they may catch fire.

This appliance must be securely fixed / recessed to an internal wall in the property. Keep all furniture / curtains etc as least 1 meter away from the fire.

The fire must be earthed.

After the fire's installation the plug must be accessible.

Always disconnect the power supply before any cleaning / maintenance of the appliance. Ensure the appliance is cool before proceeding.

If the power cord is damaged, it must be replaced by a qualified electrician or manufacturer service technician.

Do not run the power cord under a carpet / rug etc. Always ensure it is routed securely and it is not a trip hazard. Ensure the power cord is kept away from hot surfaces and areas.

Young children under 8 years old must always be supervised and must not play with the fire. The appliance is not a toy. Do not throw anything at the glass or strike the glass of the appliance.

The appliance must not be used by young children or the infirm, ensure a fire guard is fitted to protect from burns as the fire can get very hot.

The appliance must not be used through an external switching device such as a timer or connected to a circuit that is regularly on and off by a utility.

Do not use the appliance to dry clothes.

Do not use the appliance in small areas where there are persons are incapable of leaving the area on their own, unless there is constant supervision.

This appliance is supplied with a 13Amp 3 pin moulded plug. The fire must only be connected to a 220/240V ac supply 50/60 Hz. Please note the main power lead wires are coloured coded to UK and Irish standards, see below.

| | |
|---|---|
| Green / Yellow | (Earth / E ⏚ ) |
| Blue | (Neutral / N) |
| Brown | (Live / L) |

Do **NOT** operate the appliance if it is damaged.

# 2 Technical Specifications

| Models | Trance 400Slim | Trance 450 | Trance 500 MK2 | Trance 1250 | Trance 1600 | Trance 2000 |
|---|---|---|---|---|---|---|
| Maximum heat output | 1500W | 1500W | 1500W | 1500W | 1500W | 1500W |
| Minimum heat output | 750W | 750W | 750W | 750W | 750W | 750W |

Heat Output per model

Voltage supply 220 / 240V 50/60Hz

Power usage for LED lighting / per model

| Models | Trance 400 Slim | Trance 450 | Trance 500 MK2 | Trance 1250 | Trance 1600 | Trance 2000 |
|---|---|---|---|---|---|---|
| Flame LCD screen display output | 19.5W | 12W | 19.5W | 54W | 60W | 81W |
| Fuel Bed LED output | 7W | 7W | 7 W | 15W | 18 W | 20W |
| Down lighting LED output | 3W | 3W | 3 W | 5W | 6.6 W | 8W |
| Front LED pulsing lights output | 1W | 1W | 1 W | 2.0W | 2.0 W | 2.0W |
| Mood LED lighting output | | | | 9.6W | 9.6 W | 9.6W |

## Appliance Dimensions

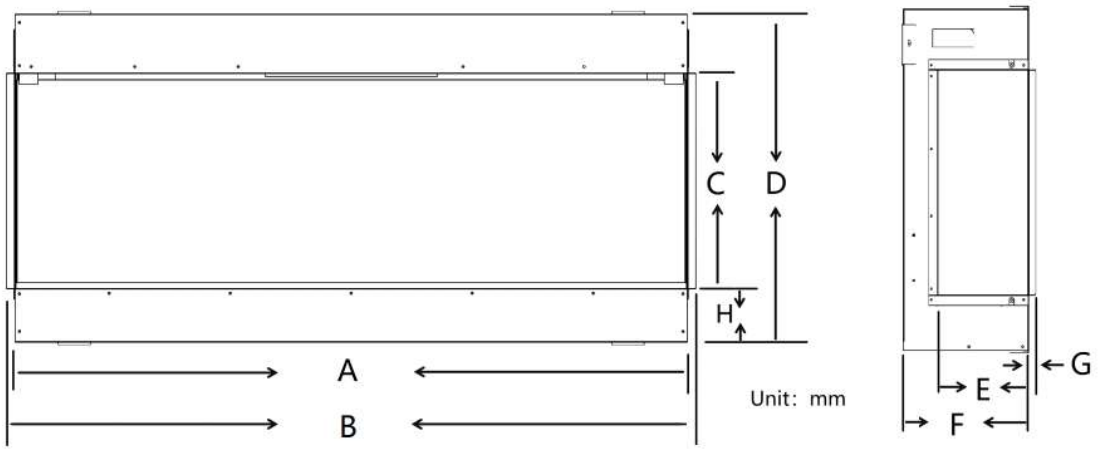


| Models | A | B | C | D | E | F | G | H |
|---|---|---|---|---|---|---|---|---|
| **Trance 400T** Slim | 400 | 532 | 410 | 613 | / | 200 | / | 51 |
| **TranceT 450** | 410 | 430 | 285 | 580 | / | 268 | / | 180 |
| **Trance 500** MK2 | 408 | 466 | 275 | 560 | / | 318 | / | 95 |
| **Trance 1250T** | 1250 | 1282 | 402 | 611 | 187 | 251 | 14 | 99 |
| **Trance 1600T** | 1600 | 1632 | 402 | 611 | 187 | 251 | 14 | 99 |
| **Trance 2000T** | 2000 | 2032 | 402 | 611 | 187 | 251 | 14 | 99 |

# 3

# Components

Before unpacking the fire inspect the carton for any damage, either caused by transport / water etc. If in doubt contact your local retailer, and do not use the appliance.

**IMPORTANT**

**Keep any plastic packaging and small parts away from young children as they will pose a danger.**

**Carton Contents:**

| | |
|---|---|
| Fire Chassis (fully assembled) | quantity 1 |
| Instruction manual | quantity 1 |
| Remote Control and battery | quantity 1 |
| Wall mounting bracket | quantity 1 |
| Lower mounting brackets | quantity 2 |
| Log set | quantity 1 |
| Base crystals (Boxed) | quantity 1 |
| Glass suction clamp | quantity 1 |

# 4

# Operating Instructions

## Manual Operation

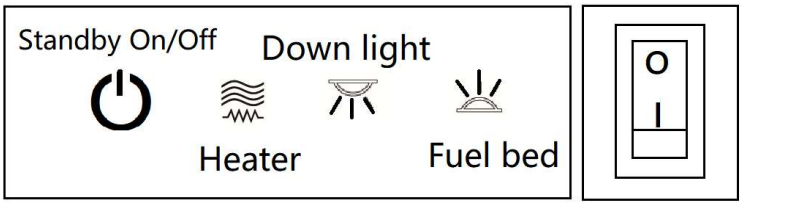


**Rocker Switch**

Push the rocker switch to I.

**Standby button**

Press the standby button once to turn the fire on (wait 15 seconds for the fire to come on).To turn the fire off press the button again.

**Heater Button**

Press the heater button once and the heater will turn on to half heat (750w). Press the heater button a second time and the heater increases to full heat (1500w). Press the heater button a third time and the heater will turn itself off.

Please Note: When the heater is turned on the fan will blow cold air for 30 seconds before the heating element starts.

**Down Light Button**

Pressing the **down light button** changes the colours. There are four different colour settings.

**Fuel Bed Button**

Pressing the **fuel bed button** changes the colours. There are fourteen different colour settings.

## Remote Operation

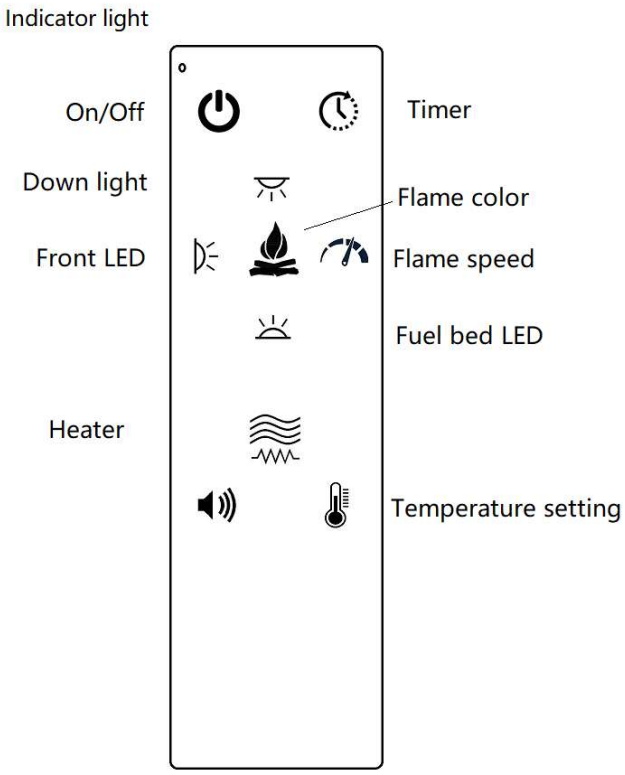


1. Turning on/off the appliance

   Turn the Rocker switch to turn on the appliance. Press to turn on or turn off the electric fire.

2. Timer

   Press button for timer setting, OFF - 60min-120min-180min-240min-300min-360min-420min-480min.

3. Electric heating control

   Press button to turn on or turn off the electric heater. Press the button once for **half** power (750 W) — twice for **full** power (1500 W)—press three times and it will turn the heater off. Turn on the heater and then press button for set temperature.

4. Down light effect

Press button to select the down light color.

5. Flame effect

Press button for select flame color.

6. Front LED pulsing lights

Press button for turn on or turn off the Front LED.

7. Fuel bed effect

Press button for select the Fuel bed color.

8. Crackling sound

Press button for turn on or turn off the burning sound

**SPARE PARTS LISTS & CODES**

ICONIC TRANCE 400T Slim

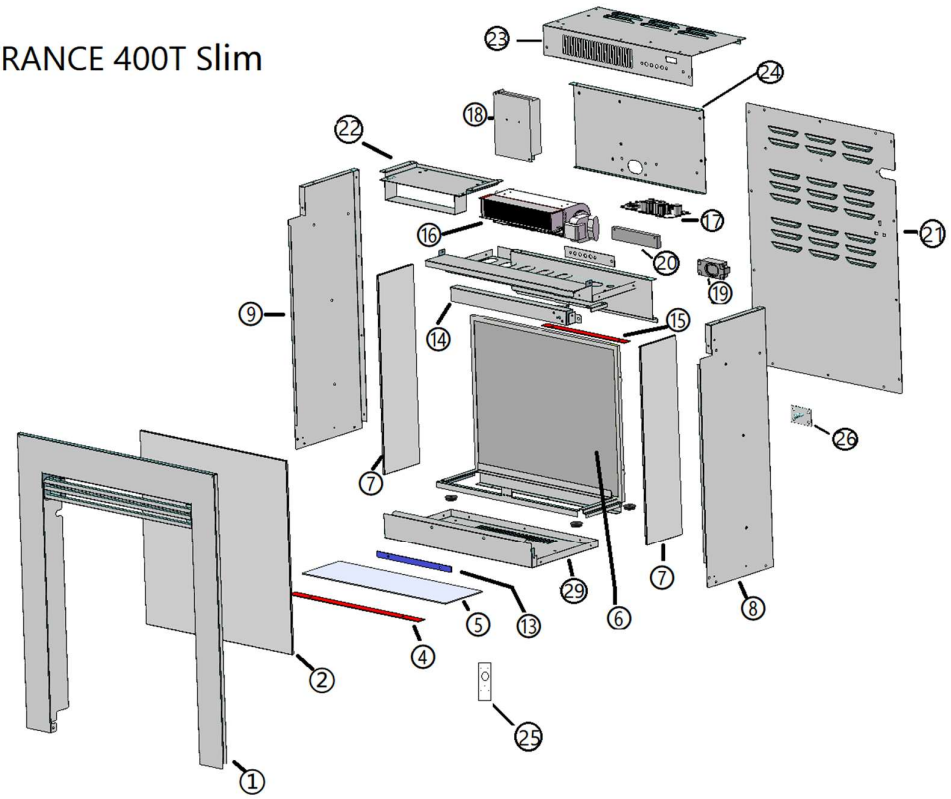


| | Component | ICONIC Trance 400T Slim | | Component | ICONIC Trance 400T Slim |
|---|---|---|---|---|---|
| 1 | Frame with glass | FRG400T | 16 | Fan Heater | FH-400T |
| 2 | Flame effect glass | FEG400T | 17 | PCB control board | PCB-Trance |
| 4 | Fuel bed Led | FBL400T | 18 | Power supply | PS-Trance |
| 5 | Fuel bed board | FBD400T | 19 | Speaker | SP-ICONIC |
| 6 | LCD Screen display-19 | LCD-19 | 20 | Power supply for Screen display | PSSD-Trance |
| 7 | Sides glass | SG400T | 21 | Back plate | BP-400T |
| 8 | Left side plate | LSP400T | 22 | Vent channel | VEC-400T |
| 9 | Right side plate | RSP400T | 23 | Top part | TP-400T |
| 13 | Front Led light | FLL400T | 25 | Remote control | RM-Trance |
| 14 | Down light guard part | DLG400T | 26 | Remote receiver | RR-Trance |
| 15 | Led Down light | DLG400T | 29 | Bottom part | BP-400T |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

# ICONIC TRANCE 450T

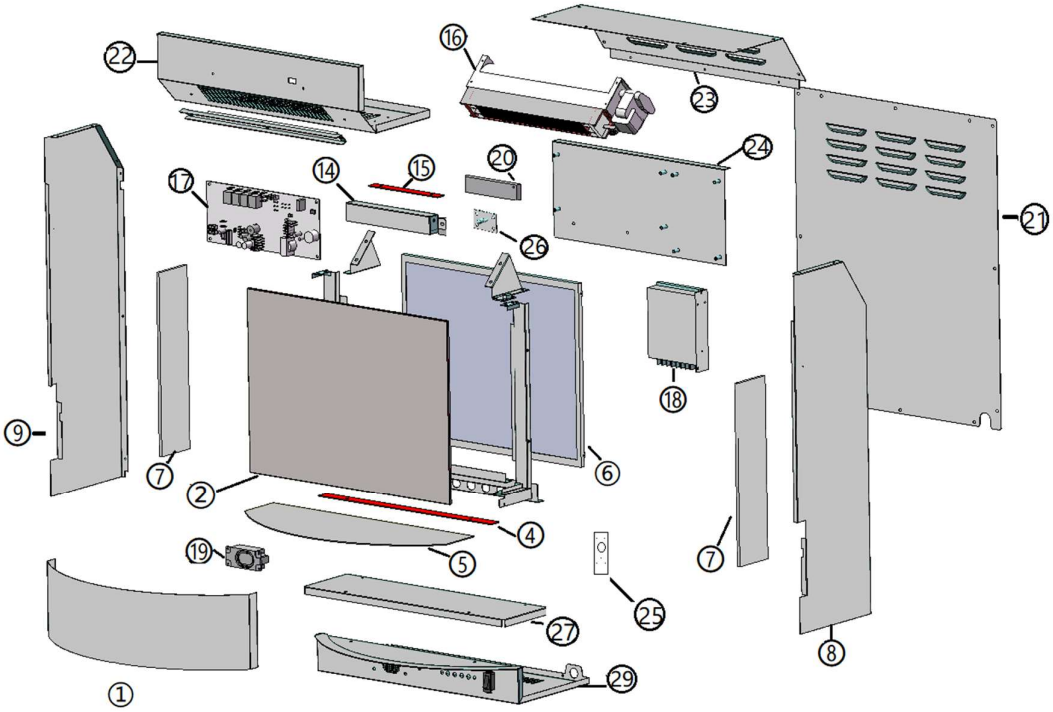


| | Component | ICONIC Trance 450T | | Component | ICONIC Trance 450T |
|---|---|---|---|---|---|
| 1 | Front part | FP-450T | 16 | Fan Heater | FH-450T |
| 2 | Flame effect glass | FEG-450T | 17 | PCB control board | PCB-Trance |
| 4 | Fuel bed Led | FBL-450T | 18 | Power supply | PS-Trance |
| 5 | Fuel bed board | FBB-450T | 19 | Speaker | SP-ICONIC |
| 6 | LCD Screen display-17 | LCD-17 | 20 | Power supply for Screen display | PSSD-Trance |
| 7 | Sides glass | SG-450T | 21 | Back plate | BP-450T |
| 8 | Left side plate | LSP-450T | 22 | Air Vent | AV-450T |
| 9 | Right side plate | RSP-450T | 23 | Top part | TP-450T |
| 14 | Down light guard part | DLGP-450T | 24 | Power supply support bracket | PSSB-450T |
| 15 | Led Down light | LDL-450T | 25 | Remote control | RM-Trance |
| | | | 26 | Remote receiver | RR-Trance |
| | | | 27 | Fuel bed led support part | FBLSP-450T |
| | | | | | |
| | | | | | |
| | | | | | |

ICONIC TRANCE 500 MK2

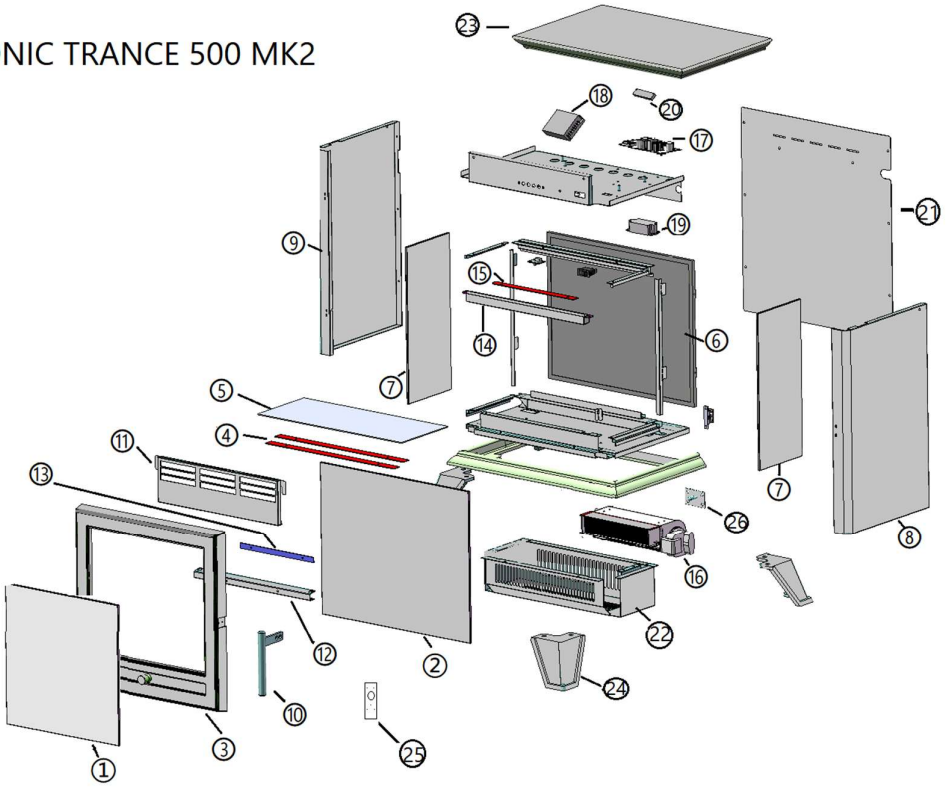


| | Component | ICONIC Trance 500 MK2 | | Component | ICONIC Trance 500 MK2 |
|---|---|---|---|---|---|
| 1 | Door glass | DG-500MK2 | 16 | Fan Heater | FH-500 |
| 2 | Flame effect Glass | FEG-500MK2 | 17 | PCB control board | PCB-Trance |
| 3 | Door | Door-500MK2 | 18 | Power supply | PW-Trance |
| 4 | Fuel bed Led | FBL-500MK2 | 19 | Speaker | SP-ICONIC |
| 5 | Fuel bed board | FBB-50MK2 | 20 | Power supply for Screen display | PSSD-Trance |
| 6 | LCD Screen display-19 | LCD-19 | 21 | Back plate | BP-500MK2 |
| 7 | Sides glass | SG-500MK2 | 22 | Fan Heater guard part | FHGP-500MK2 |
| 8 | Left side plate | LG-500MK2 | 23 | Top part | TP-500MK2 |
| 9 | Right side plate | RSP-500MK2 | 24 | legs | LG-500MK2 |
| 10 | Door Handle | DH-500MK2 | 25 | Remote control | RM-Trance |
| 11 | Coal catcher | CC-500MK2 | 26 | Remote receiver | RR-Trance |
| 12 | Front light guard part | FLGP-500MK2 | 27 | | |
| 13 | Front Led light | FLL-500MK2 | 28 | | |
| 14 | Down light guard part | DLGP-500MK2 | 29 | | |
| 15 | Down light Led | DLL-500MK2 | | | |

ICONIC TRANCE 1250T

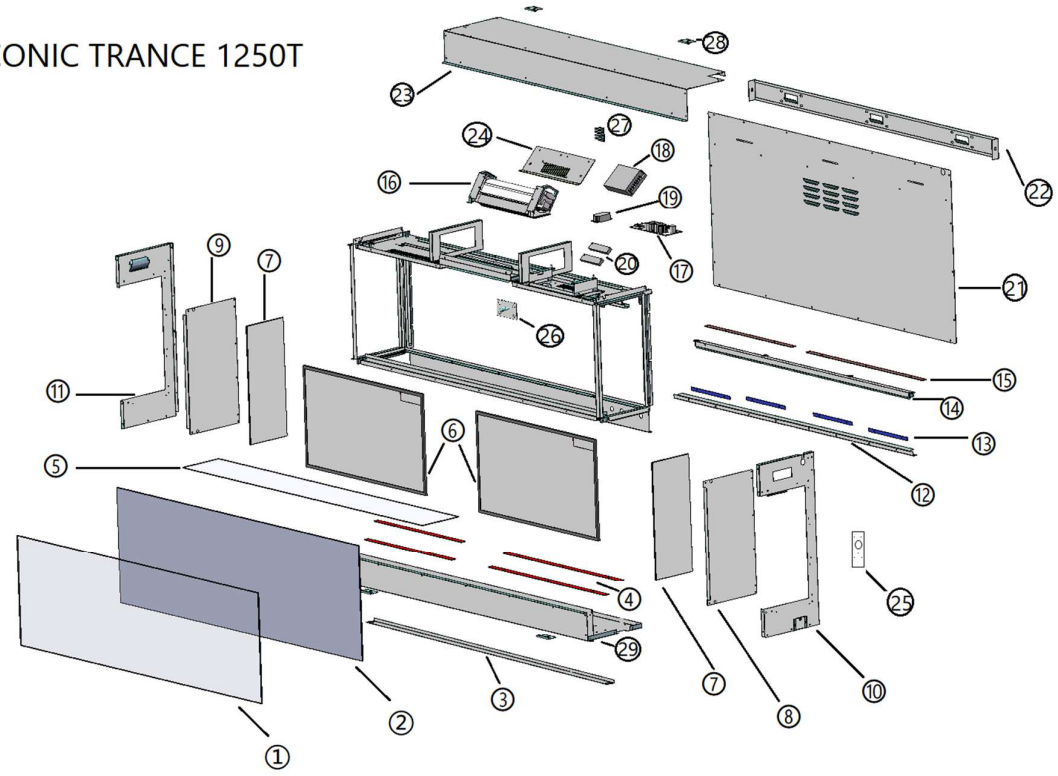


| | Component | ICONIC Trance 1250T | | Component | ICONIC Trance 1250T |
|---|---|---|---|---|---|
| 1 | Front glass | FG-1250 | 16 | Fan Heater | FH-1250 |
| 2 | Flame effect glass | FEG-1250T | 17 | PCB control board | PCB-Trance |
| 3 | Front glass Fixing part | FGFP-1250 | 18 | Power supply | PW-Trance |
| 4 | Fuel bed Led | FBL-1250 | 19 | Speaker | SP-ICONIC |
| 5 | Fuel bed board | FBB-1250 | 20 | Power supply for Screen display | PSSD-Trance |
| 6 | LCD Screen display-27 | LCD-27 | 21 | Back plate | BP-1250T |
| 7 | Sides glass | SG-1250 | 22 | Mounting bracket | MB-1250 |
| 8 | Left cover side plate | LCSP-1250 | 23 | Top part | TP-1250T |
| 9 | Right cover side plate | RCSP-1250 | 24 | Power supply support bracket | PSSB-Trance |
| 10 | Left side part | LSP-1250T | 25 | Remote control | RM-Trance |
| 11 | Right side part | LSP-1250T | 26 | Remote receiver | RR-Trance |
| 12 | Front light guard part | FLGP-1250 | 27 | LCD display signal Hub | LDSH-Trance |
| 13 | Front Led light | FLL-1250 | 28 | Fixing bracket | FB-ICONIC |
| 14 | Down light guard part | DLGP-1250 | 29 | Bottom part | BP-1250T |
| 15 | Led Down light | LDL-1250 | 30 | | |

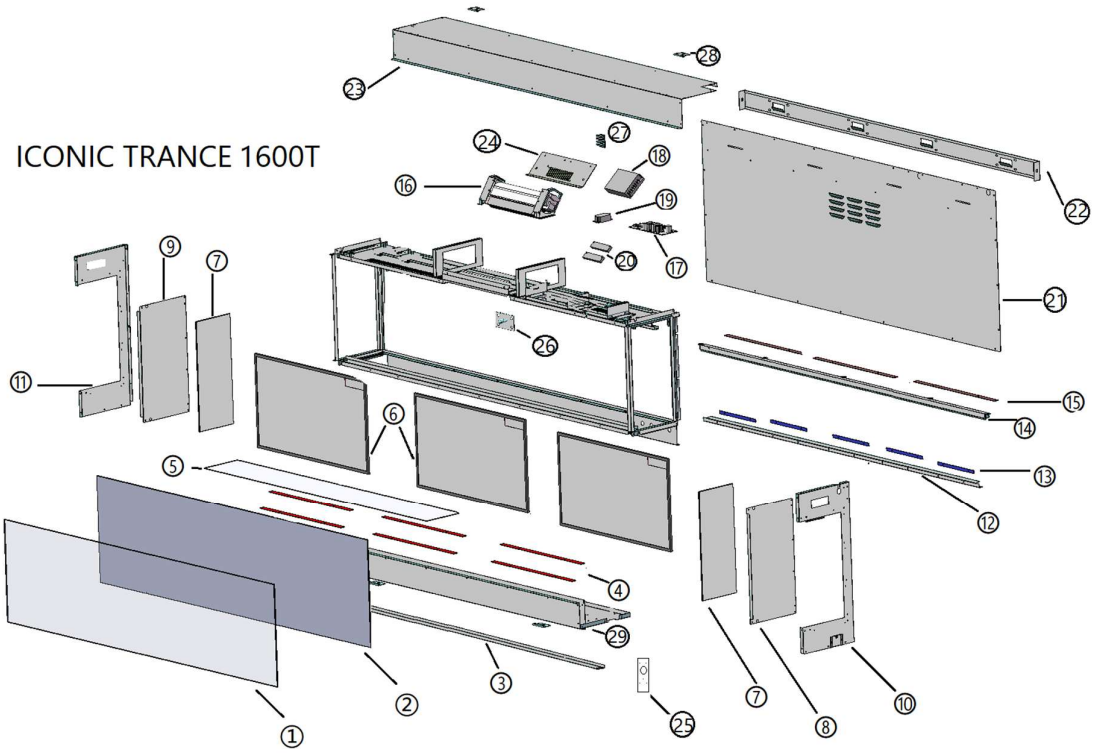


| | Component | ICONIC Trance 1600T | | Component | ICONIC Trance 1600T |
|---|---|---|---|---|---|
| 1 | Front glass | FG-1600 | 16 | Fan Heater | FH-ICONIC |
| 2 | Flame effect glass | FEG-1600T | 17 | PCB control board | PCB-Trance |
| 3 | Front glass Fixing part | FGFP-1600 | 18 | Power supply | PW-Trance |
| 4 | Fuel bed Led | FBL-1600 | 19 | Speaker | SP-ICONIC |
| 5 | Fuel bed board | FBB-1600 | 20 | Power supply for Screen display | PSSD-Trance |
| 6 | LCD Screen display-21.5 | LCD-21.5 | 21 | Back plate | BP-1600T |
| 7 | Sides glass | SG-1600 | 22 | Mounting bracket | MB-1600 |
| 8 | Left cover side plate | LCSP-1600 | 23 | Top part | TP-1600T |
| 9 | Right cover side plate | RCSP-1600 | 24 | Power supply support bracket | PSSB-Trance |
| 10 | Left side part | LSP-1600T | 25 | Remote control | RM-Trance |
| 11 | Right side part | RSP-1600T | 26 | Remote receiver | RR-Trance |
| 12 | Front light guard part | FLGP-1600 | 27 | LCD display signal Hub | LDSH-Trance |
| 13 | Front Led light | FLL-1600 | 28 | Fixing bracket | FB-ICONIC |
| 14 | Down light guard part | DLGP-1600 | 29 | Bottom part | BP-1600T |
| 15 | Led Down light | LDL-1600 | 30 | | |
| | | | | | |

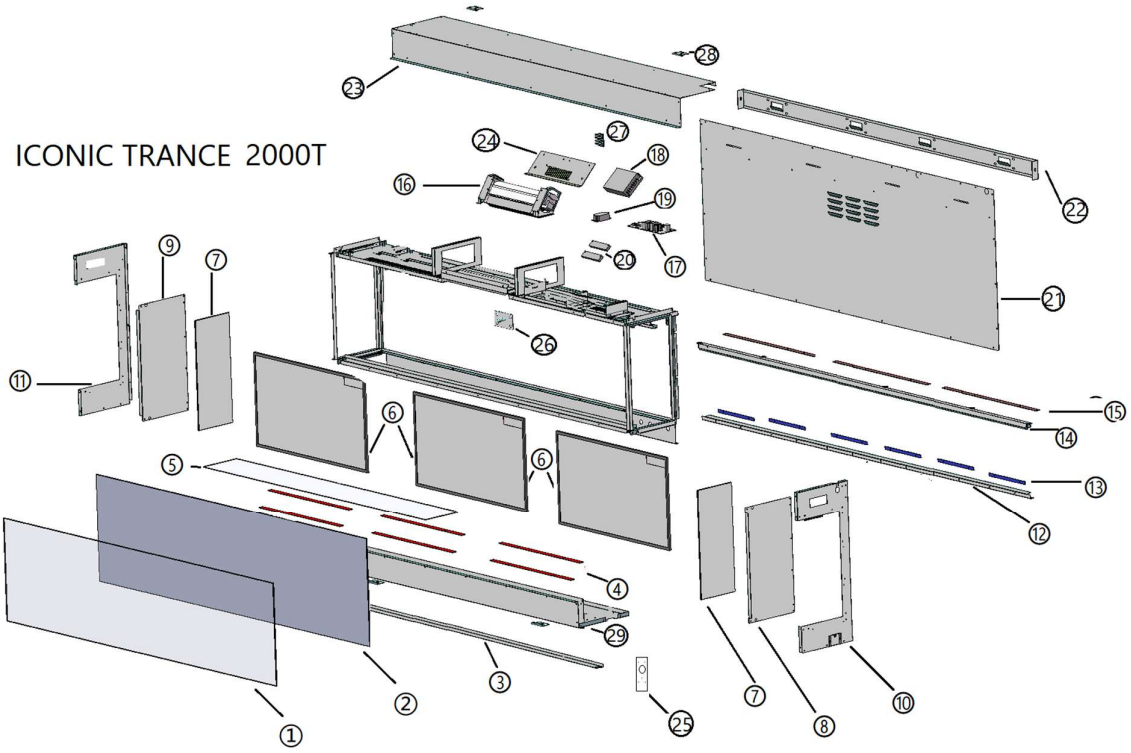


| | Component | ICONIC Trance 2000T | | Component | ICONIC Trance 2000T |
|---|---|---|---|---|---|
| 1 | Front glass | FG-2000 | 16 | Fan Heater | FH-ICONIC |
| 2 | Flame effect glass | FEG-2000T | 17 | PCB control board | PCB-Trance |
| 3 | Front glass Fixing part | FGFP-2000 | 18 | Power supply | PW-Trance |
| 4 | Fuel bed Led | FBL-2000 | 19 | Speaker | SP-ICONIC |
| 5 | Fuel bed board | FBB-2000 | 20 | Power supply for Screen display | PSSD-Trance |
| 6 | LCD Screen display-27 | LCD-27 | 21 | Back plate | BP-2000T |
| 7 | Sides glass | SG-2000 | 22 | Mounting bracket | MB-2000 |
| 8 | Left cover side plate | LCSP-2000 | 23 | Top part | TP-2000T |
| 9 | Right cover side plate | RCSP-2000 | 24 | Power supply support bracket | PSSB-Trance |
| 10 | Left side part | LSP-2000T | 25 | Remote control | RM-Trance |
| 11 | Right side part | RSP-2000T | 26 | Remote receiver | RR-Trance |
| 12 | Front light guard part | FLGP-2000 | 27 | LCD display signal Hub | LDSH-Trance |
| 13 | Front Led light | FLL-2000 | 28 | Fixing bracket | FB-ICONIC |
| 14 | Down light guard part | DLGP-2000 | 29 | Bottom part | BP-2000T |
| 15 | Led Down light | LDL-2000 | 30 | | |

# Maintenance

**Always isolate the power from the mains and ensure the fire has cooled down before any cleaning or maintenance is undertaken.**

## Cleaning the appliance

Carefully clean the air inlet and heater area with a cloth or vacuum on a regular basis. It is important that these areas are kept free from dust / pet hairs etc.

Do not use abrasive cleaners on the appliance.

Do not spray liquids directly onto the appliance.

When cleaning the glass spray glass cleaner onto a cloth and then clean glass, buff dry with a lint free cloth.

**NOTE:** The glass in the appliance is tempered for safety, if the glass receives a hard impact it will shatter, take extra care to ensure the corners of the glass do not hit a hard surface.

If removing the glass from the appliance to clean it then certain precautions need to be followed.

Wear safety gloves /glasses / ensure the glass is placed on a soft surface.

We recommend for the large 1600 (64”) and 2000 (80”) appliances that 2 people are needed to remove the glass.

Do not rely on the glass suction cup supplied to carry the weight of the glass, these are only for tilting the glass back so it can be removed.

## Battery Replacement

Replace the battery when the battery indicator is empty on the remote. Ensure to replace with the correct type of batteries (2 X 1.5V AAA), Ensure the batteries are installed in the correct orientation.

# 6

# Warranty

Your Iconic electric fire comes with a two-year parts and labour warranty as standard. The warranty starts from the date of purchase, if you wish to extend the warranty for an extra 12 months you must register the appliance on https://www.heatdesign.ie/register-iconic-gas-fire-warranty/ . To avail of your warranty, you must upload proof of purchase (Receipt) from your local approved Iconic retailer. The warranty is not transferable.

All warranties will be null and void if unauthorised repairs / modifications are made to the electric fire / accidently damage caused by transit / improper installation / serial numbers missing or modified.

Heat Design shall not be liable for any consequential loss or damage whatsoever arising from or in connection with this electric fire.

Service calls and installation errors are not covered under manufacturer warranty. A call out charge will apply.

This warranty is an addition and does not affect your statutory rights of consumers.

Heat Design

Unit 60, Hawthorn Road, Western Industrial Estate, Naas Road

Dublin 12.

Email Info@heatdesign.ie

Rev 1 – 11/30/2023